



3.

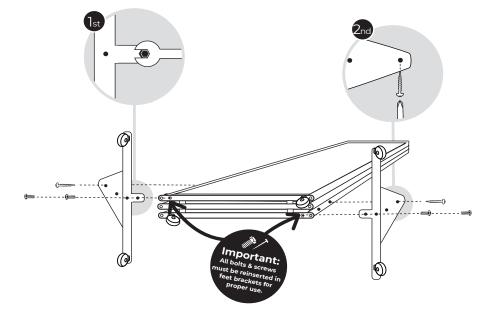

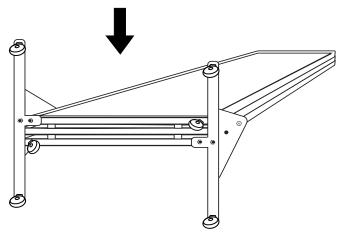

Remove two bolts from outside, bottom edge of each outer panel and one screw from the side of each outer panel. Then attach foot base with **bolts first**, screws second. Repeat for other side.

Assembly complete!
We hope you enjoy your new Quick-Wall Sliding!

For questions regarding your Quick-Wall Sliding please contact us at 1-855-457-1473 or customerservice@versare.com

